


## DIGITALE LED KLOK BLAUW INBOUW

€ 14,96

Excl. BTW: € 12,36

### Afbeeldingen

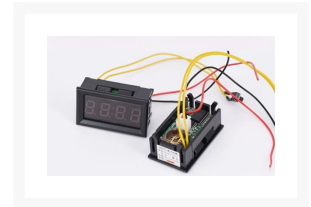

### Beschrijving

#### Product Informatie:

- Voedingsspanning: DC 4.5-30V
- Operating Stroom:<20mA
- Power Supply Lead Draad Lengte:>120mm
- Time Precisie :<= 2s/dag
- Display Type:0.4 "LED;
- Front: 48\*29\*21mm
- Inbouw: 45.5\*26.5mm
- Operating Temperatuur:-10 °C ~ 65 °C
- Operating Vochtigheid: 10-80%

### *Kenmerken:*

- Een Toets Bediening
- Standaard Display: uur, minuut, seconde, datum, timer tijd
- Display 24 Uur Tijd Systeem
- Power Off Geheugenfunctie
- Batterij voor backup CR1220

### *Using manual*

1.Power On:according to "up positive" "down negative" direction to put CR1220 button battery in battery socket (note:battery is not included in the package)

2.If there is standby battery and no connection with power,clock will keep moving (connect red positive black negative with power,then it will display 0:00)

3.Key Shift Sequence:hour minute mode-second mode-date mode-timer mode

4.Second Mode:

- 1)In time mode,press the key,it will display second,display format:XX
- 2)No key and press for 30s,it will automatically return to hour minute mode
- 3)press again move into next mode

5.Date Mode:

- 1)In time mode,press the key for twice it will display date;display format:X month X day
- 2)After 30s,it will automatically return to hour minute mode
- 3)Press again,it will move into next mode

6.Timer Mode:

- 1)In time mode,press the key for three times,it will display timing mode;display format:00 : .00
- 2)If it doesn't start to timing and no key within 30s,press it will return to hour minute mode
- 3)In time mode,long press the key it will start to timing,the point symbol under colon start to flash;if long press the key again it will stop timing,the point symbol under colon will always on,not flash;long press again,it will accumulate starting
- 4)Timing Clear Way:external connect with red black wire power off,long press the key for 5s
- 5)In time mode,press the key can switch to hour minute mode,and can also check date,second

7.Time Setting:

- 1)In hour minute mode or second mode,long press the key until "hour" digit flash,and it represents coming into time hour setting,press the key again to adjust hour time
- 2)After finishing hour adjustment,long press the key until "minute" digit flash,and it represents coming into minute setting;press the key again to adjust minute time
- 3)After finishing minute adustment,long press the key until "second" digit flash,and it represents coming into second setting;press once to clear,long press quit time setting mode and save time which has been set
- 4)During the process of time setting,if there is no key operation for 30s,it will quit setting mode automatically

8.Date Setting:

- 1) In date mode, long press the key until "year" digit flash, and it represents coming into setting mode; press the key again to adjust year adjustment
- 2) Long press the key until "month" digit flash, and it represents coming into month setting; press the key again to month adjustment
- 3) After finishing month adjustment, long press the key until "day" digit flash, and it represents coming into day setting; press the key again to day adjustment; after adjustment, long press the key it will quit setting mode and save
- 4) During the process of date setting, if there is no key operation within 30s, it will automatically quit setting mode.

## Productinformatie

---

Artikelnummer	DLKO4BL
Merk	Brand

